


-  Wool  
 Silk  
 Rinse Hold

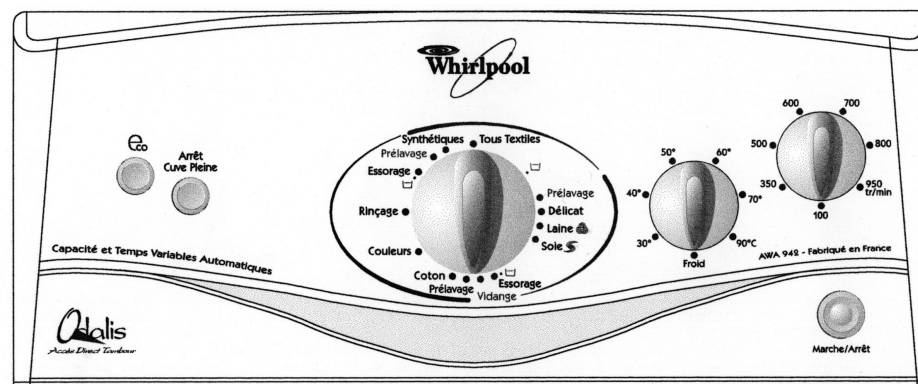

1) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

Programme	Type of fabrics / Degree of soiling / Notes	Max. Load kg	Detergent and Additives				Options		Temperature Selector °C	Maximum technical Spin Speed tr/min	Recommended Spin Speed min	Programme duration min 1)
			Pre-wash I	Wash II	Softener ☼	Bleach ⚠	Eco	Rinse Hold				
<b>Cotton with prewash</b> <i>Coton avec Pré-lavage</i>	Heavily soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). The max. load for heavily soiled laundry is 3,5 kg.	5.0	Yes	Yes	*	*	*	*	Cold to 90	950	800 to 950	135
<b>Cotton</b> <i>Coton</i>	Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	—	Yes	*	*	*	*	Cold to 90	950	800 to 950	120
<b>Coloured Cotton</b> <i>Couleurs</i>	Lightly soiled textiles in cotton or linen blouses, skirts, dark coloured terry cloth, coloured linen articles, jeans, etc.	5.0	—	Yes	*	—	—	*	Cold to 40	950	800 to 950	70
<b>Rinse + Spin</b> <i>Rinçage + Essorage</i>	Programme for treating wash with starch or softener. Terminates with an intensive spin cycle.	5.0	—	—	*	—	—	*	Cold	950	800 to 950	30
<b>Spin</b> <i>Essorage</i>	Programme for Intensive spin cycle.	5.0	—	—	—	—	—	—	—	950	800 to 950	15
<b>Synthetics with prewash</b> <i>Pré-lavage + pré-lavage</i>	Heavily soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	Yes	Yes	*	—	*	*	Cold to 60	800	500 to 700	100
<b>Synthetics</b> <i>Synthétique</i>	Lightly or averagely soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	*	*	Cold to 60	800	500 to 700	90
<b>Mixed</b> <i>Tous textiles</i>	Lightly soiled blouses, skirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	—	*	Cold to 40	800	500 to 700	50
<b>Delicate with prewash</b> <i>Délicat avec Pré-lavage</i>	Heavily soiled delicate curtains, dresses, skirts and blouses.	1.5	Yes	Yes	*	—	—	*	Cold to 40	800	100 to 500	55
<b>Delicate</b> <i>Délicat</i>	Delicate curtains, dresses, skirts and blouses.	1.5	—	Yes	*	—	—	*	Cold to 40	800	100 to 500	40
<b>Wool</b> <i>Laine</i>	Only machine washable woollens with pure new wool label. If you select the special function "Rinse Hold" do not leave garments to soak for too long.	1.0	—	Yes	*	—	—	*	Cold to 40	800	100 to 500	35
<b>Silk</b> <i>Soie</i>	Machine washable silk and viscose articles. No spin drain only.	1.0	—	Yes	*	—	—	*	Cold to 30	—	—	40
<b>Spin</b> <i>Essorage</i>	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	—	800	100 to 500	5
<b>Drain</b> <i>Vidange</i>	Drain only, without spin cycle. Alternative way of terminating programmes with "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	3

N.B.: The excess of detergent in the dispenser could cause technical problems.

5019 100 12631

## CONSUMPTION DATA


Programme	Temperature selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme duration (min)
Cotton	90	5.0	63	1.8	120
Cotton	60	5.0	59	1.15	105
Coloured Cotton	40	5.0	55	0.6	70
Synthetics	60	2.0	57	0.8	90
Mixed	40	2.0	49	0.4	50
Delicate	30	1.5	50	0.3	40
Wool	40	1.0	50	0.4	35
Silk	30	1.0	50	0.3	40

Pre-wash cycle increases programme duration by approx. 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

## ADDING DETERGENT AND ADDITIVES

Add the detergent and the additives into the dispenser as follows:

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and conditioners
- Chlorine bleach
- Stain remover agents
- Anti-scale agents (water hardness 4)

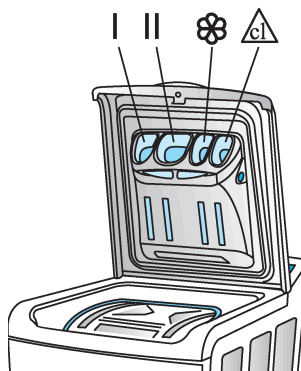

## Important:

- Be careful not to fill more than the **"MAX"** level mark.
- For programme with prewash: do not use liquid detergents.
- For programmes without prewash from cold to 40° C it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

## CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature knob** to the required temperature.
3. Turn the **spin speed selector** on the required setting.

 
## PRESS THE ANY DESIRED OPTION BUTTON

**"Eco" button**

- The wash time is extended and the water temperature is reduced.
- This function saves about 30% in energy without compromising the excellent results of the wash.

**"Rinse Hold" button**

- The laundry remains in the last rinse water without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicate".
- This function is particularly useful if you want to postpone spinning to a later time or when you do not wish to spin the clothes.

**Note:** The programme selector knob stops on the position .

**Terminate the programme:**

- Press the "Rinse Hold" button again; the programme will terminate automatically with the spin cycle for the preset wash programme.
- If you do not wish to spin the clothes, switch off the appliance, turn the programme knob to the corresponding drain programme and switch on the appliance again.

## PROGRAMME START

Open the tap and press the "On/Off" button. The pilot lamp lights up.

## DOOR LOCK

During the running programme the door can be opened for adding further laundry.

The door locks automatically in all spinning cycles. If the programme is stopped or the electrical power supply is terminated, the door lock will open after approximately 1 minute.

**Note:** If you open the door during the delicate or wool programme, there will be no spinning at the end of the cycle but only draining. If you want to spin the laundry start the gentle spin programme.

## PROGRAMME END

- The programme selector knob is at the end of the cycle.
1. Cancel the special options by pressing the appropriate buttons.
  2. Turn the water supply tap off.
  3. Wait for the door to unlock (about 1 minute).
  4. Open the door and the drum flaps and unload the machine.

## SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the "On/Off" button to switch off the appliance.
2. Select the new programme, temperature, spin speed and option.
3. Press the "On/Off" button to switch on the appliance.

## TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the "On/Off" button to switch off the appliance.
2. Set the programme selector to "Drain".
3. Press the "On/Off" button to start the drain programme.

Only open the door when the programme selector is at the end of the cycle and the door is unlocked (after approximately 1 minute).